

**Leviat**<sup>®</sup>  
A CRH COMPANY

**Ancon**<sup>®</sup>



# Shearfix Punching Shear Reinforcement

Design Manual to  
BS EN 1992 (EC2)

# Ancon Shearfix EC2 Design Manual

---

## Contents

1	Introduction .....	2
2	Design Information and Assumptions .....	3
2.1	Information required .....	3
2.2	Design Assumptions .....	3
2.3	Software Defaults.....	3
3	Slab depth, h .....	4
4	Effective depth, d.....	4
5	Reinforcement ratio, $\rho$ .....	4
6	Column and edge dimensions.....	5
6.1	Edge dimensions .....	6
6.2	Edge dimension limits .....	6
7	Column locations and virtual slab openings.....	7
8	Eccentricity factor $\beta$ .....	8
8.1	General formula for $\beta$ values .....	9
8.2	Internal column with biaxial moments.....	9
8.3	Edge column with moment towards interior of slab.....	10
8.4	Corner column with moment towards interior of slab.....	10
8.5	Default $\beta$ -value.....	11
9	Parameters for calculating $\beta$ -values.....	11
9.1	Translation of moments .....	11
9.2	Control perimeters.....	12
9.3	$W_1$ values .....	15
10	Slab openings .....	15
11	Shear stress calculations .....	17
12	National Annex parameter values.....	20
13	Layout of punching shear reinforcement.....	20
13.1	Radial layout general procedure .....	21
13.2	Cruciform layout general procedure .....	22
13.3	Rails near slab openings and distribution rails .....	23
14	References .....	24

## 1 Introduction

Shear reinforcement is used within a slab or foundation around a column to prevent punching shear failure. Ancon Shearfix is the ideal solution to the design and construction problems associated with punching shear.

The Ancon Shearfix system comprises double-headed studs welded to a pair of flat rails. It is manufactured to suit the specific requirements of each application. The quantity of each component, the dimensions and spacing, and the layout pattern around the column are determined by calculation. LeviaT provides free software to determine the optimum system design.

Studs are manufactured from high strength steel bar with a characteristic yield strength of 500 N/mm<sup>2</sup>. In the UK, five diameters are available (10, 12, 16, 20 and 25mm); in Australia, four diameters are available (12, 16, 20 and 24mm). The heads are hot forged to three times the diameter of the bar. Studs are manufactured to virtually any length to suit the depth of the slab, but in the UK they are normally formed in increments of 5mm within the 100-1000mm range, and in Australia they are normally formed in increments of 10mm within the 100-500mm range.

The studs are welded to the rails at spacings determined by our software or design calculation. The rail performs no structural function but ensures stud alignment and positioning within the slab.

The rails are manufactured from strips of steel, typically 20mm wide, reducing to 16mm wide for 10, 12 and 16mm diameter studs in the UK. The gap between the strips allows for passage of concrete during pouring and also enables the rail to be nailed through spacers to formwork when fixed 'bottom up' i.e. prior to other reinforcement.

Ancon Shearfix is a proven system, which has undergone independent mechanical and structural testing. It has been approved by CARES for use in reinforced concrete slabs designed in accordance with EC2 design standard.

We are pleased to offer this Design Manual which demonstrates our expertise in the field of punching shear reinforcement to EC2.

The design method for Shearfix punching shear reinforcement is based on section 6.4 of BS EN 1992-1-1:2004, and is outlined within this Design Manual. The supporting Shearfix software reflects this method.

This Design Manual and the Shearfix program accommodate some column shapes and locations and some design options which are not specifically addressed by the Eurocode. BS EN 1992-1-1:2004 does not include oval columns or columns at re-entrant corners. LeviaT has drawn upon the principles presented in the BS EN 1992-1-1:2004, the expert advice of Professor Regan and verification testing that was carried out by us at Cambridge University with Professor Regan in March 2012. Furthermore, BS EN 1992-1-1:2004 does not include dimensional limits for the spread of punching shear stresses around the control perimeters of large and elongated columns. We have drawn upon the principles presented in Model Code 2010 and recent research findings to develop a "Best Practice" design option when dealing with large and elongated columns, whilst an "EC2" design option (which adheres to the rules of BS EN 1992-1-1:2004) is also provided.

## 2 Design Information and Assumptions

### 2.1 Information required

The following information is required in order to design the punching shear reinforcement:

- Column shape (rectangular, circular, oval)
- Column location (interior, edge, corner, re-entrant corner, wall end, wall corner)
- Column dimensions
- Distances to slab edges
- Slab properties (thickness, concrete strength, cover to main reinforcement)
- Diameter and spacing of tension reinforcement in both directions within  $3d$  from the column face; or mean effective depth of tension reinforcement and reinforcement ratios in both directions
- The ultimate design load,  $V_{Ed}$ , and ultimate design moments,  $M_{Ed,y}$  and  $M_{Ed,z}$ ; or, the ultimate design load,  $V_{Ed}$ , and the appropriate  $\beta$  factor to be applied (see section 8)
- Location and size of any opening(s) within  $6d$  from the column face

### 2.2 Design Assumptions

The following assumptions have been made in line with guidance within EC2:

- The minimum slab thickness is 200mm
- The minimum column dimension is 155mm
- The loads and moments entered have been factored in accordance with the Eurocodes
- The loads do not include the loads from the column above
- The concrete slab is to be constructed from normal weight concrete
- The reinforcement is detailed and installed as set out in EC2

### 2.3 Software Defaults

Column location	Internal	Openings	None
Column shape	Rectangular	(add rectangular) $\rightarrow l_y$	500 mm
Dimension, y	500 mm	(add rectangular) $\rightarrow l_z$	500 mm
Dimension, z	300 mm	(add rectangular) $\rightarrow y'$	400 mm
Dimension, D	500 mm	(add rectangular) $\rightarrow z'$	600 mm
Slab depth, h	250 mm	(add circular) $\rightarrow l_y$	500 mm
Concrete grade	C20/25	(add circular) $\rightarrow l_z$	500 mm
Top cover, $C_{nom,t}$	25 mm	(add circular) $\rightarrow \emptyset$	500 mm
Top cover, $C_{nom,b}$	25 mm	Shearfix layout	Auto
Reinforcement	None	Shearfix stud diameter	Auto
(add) $\rightarrow$ Bar diameter	8 mm	Large and elongated columns	Best Practice
(add) $\rightarrow$ Spacing	150 mm	Include distribution rails	Yes
Eccentricity factor, $\beta$	Calculated	Rail placing	Bottom-up
Shear load, $V_{Ed}$	500 kN	Distance to first stud	0.5d
Moment, $M_{Ed,y}$	0 kNm		
Moment, $M_{Ed,z}$	0 kNm		

### 3 Slab depth, h

The software can accommodate a step in slab depth. This step can be parallel to the y-axis or parallel to the z-axis and it can occur on the top or bottom surface of the slab. It may be located anywhere within the column width.

The smaller slab depth is applied to all shear capacity calculations. Both slab depths are applied to stud height calculations, such that some rails comprise of short studs for the thinner portion of slab and other rails comprise of tall studs for the thicker portion of slab. The shear studs in one rail are all the same height.

### 4 Effective depth, d

The effective depth of the reinforcement is the mean effective depth of all layers of reinforcement present. The equations below assume there are two layers of reinforcement in each direction in the order illustrated. If this is not the case, the equations need to be adapted accordingly. (The Shearfix software can accommodate up to two layers of reinforcement in each direction.)

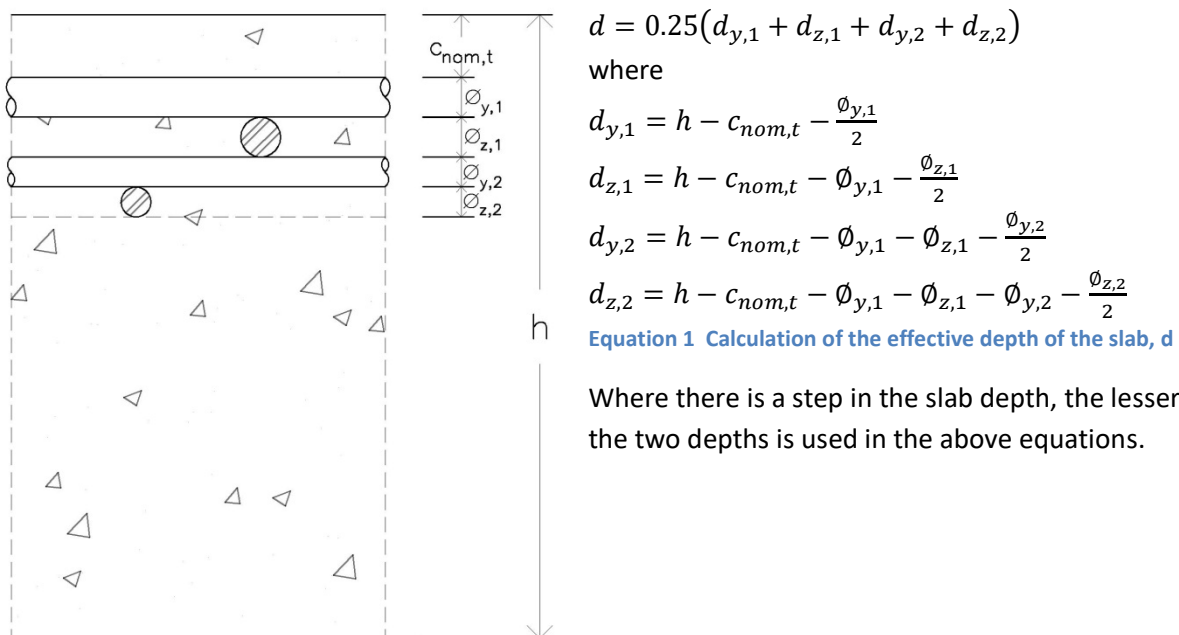


Figure 1 Reinforcement in the slab

### 5 Reinforcement ratio, $\rho$

The reinforcement ratio of the slab is calculated as follows:

$$\rho_l = \sqrt{\rho_{ly} \times \rho_{lz}} \leq 0.02$$

Where:  $\rho_{ly} = \frac{A_{sy}}{A_c} = \frac{A_{sy,1}}{d_{y,1}} + \frac{A_{sy,2}}{d_{y,2}}$  and  $\rho_{lz} = \frac{A_{sz}}{A_c} = \frac{A_{sz,1}}{d_{z,1}} + \frac{A_{sz,2}}{d_{z,2}}$





Equation 2 Calculation of the slab reinforcement ratio, based on BS EN 1992-1-1:2004, 6.4.4 (1)

For the purpose of this calculation, the units for the area of tensile slab reinforcement,  $A_s$ , are  $\text{mm}^2/\text{mm}$  width of slab. The area of concrete,  $A_c$ ,  $\text{mm}^2/\text{mm}$  width of slab is equal to the effective depth of the reinforcement,  $d$  ( $\text{mm}^2$ ), multiplied by a 1mm strip width of slab.

## 6 Column and edge dimensions

There are varying schools of thought regarding the column perimeter length effective in resisting punching shear. The only limit in the current Eurocode is the aspect ratio which differentiates a column from a wall, 1:4 (BS EN 1992-1-1:2004+A1:2014, 9.5.1). However, research suggests that punching shear stresses in the slab are focused at the corners of columns. The larger a column is the more significant this effect. To accommodate these two schools of thought, we have developed two design options for dealing with large and elongated columns: “EC2” and “Best Practice”.

For both approaches, the length to breadth ratio of rectangular and oval columns is limited to 4:1. There is no limit to the control perimeters of a circular column or to the curved faces of an oval column. In the Best Practice approach, an additional rule is imposed limiting the control perimeters to a distance of  $1.5d$  from the corners of rectangular columns and from the point of transition between the straight and curved faces of an oval column. The Best Practice approach is in accordance with fib Model Code 2010 and the research paper, “Study on Influence of Column Size and Slab Slenderness on Punching Strength” (Einpaul, J., Bujnak, J., Fernandez Ruiz, M. and Muttoni, A. (2016), *ACI Structural Journal*, V. 113, No. 1, pp. 135-146).

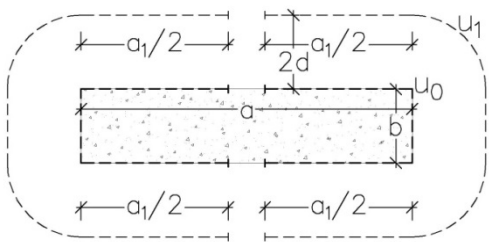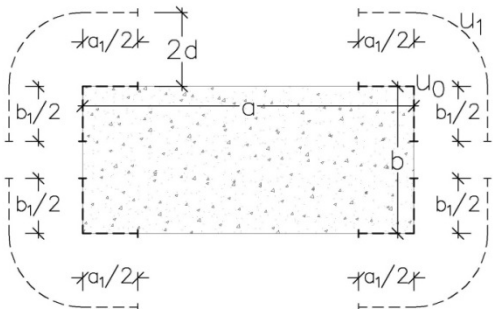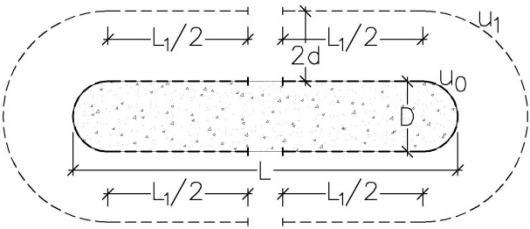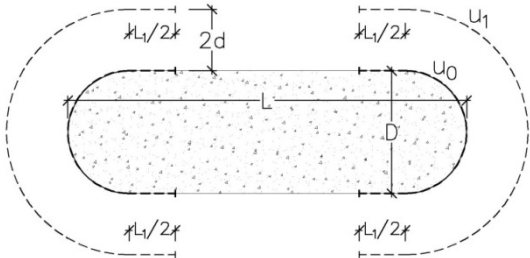“EC2”	“Best Practice”
 <p>Where:  <math>a_1 = \min(a, 4b)</math>  <math>u_0 = 2a_1 + 2b</math>  <math>u_1 = 2a_1 + 2b + 4\pi d</math></p>	 <p>Where:  <math>a_1 = \min(a, 4b, 3d)</math>  <math>b_1 = \min(b, 3d)</math>  <math>u_0 = 2a_1 + 2b_1</math>  <math>u_1 = 2a_1 + 2b_1 + 4\pi d</math></p>
 <p>Where:  <math>L_1 = \min(L - D, 3D)</math>  <math>u_0 = 2L_1 + \pi D</math>  <math>u_1 = 2L_1 + \pi(D + 4d)</math></p>	 <p>Where:  <math>L_1 = \min(L - D, 3D, 3d)</math>  <math>u_0 = 2L_1 + \pi D</math>  <math>u_1 = 2L_1 + \pi(D + 4d)</math></p>

The Eurocode notation for column dimensions ( $c_1, c_2$ ) is dependent on the direction of the applied load. For design simplicity, the program input (and the notation of this design manual) relates to the directions of the y and z axes. EC2 notation is translated accordingly.

### 6.1 Edge dimensions

The Shearfix program requires entry of the distances between column faces and slab edges in the y- and z-directions,  $a_{e,y}$  and  $a_{e,z}$ . For calculations, these are translated into edge distances  $g_a$ ,  $g_b$ ,  $g_L$ ,  $g_D$ ,  $g_y$  or  $g_z$  as appropriate. The relationships between these dimensions are illustrated in Figure 2.


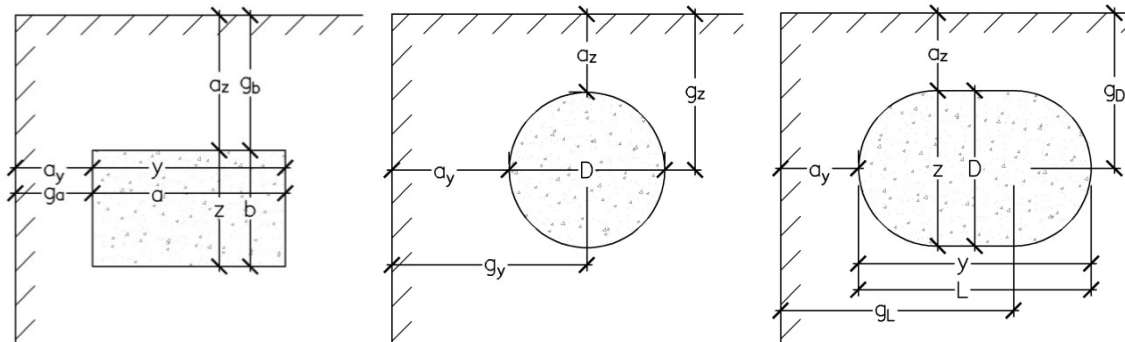



Figure 2 Edge dimensions

- $a_{e,y}$  distance between column face and slab edge parallel to y-axis (labelled  $a_y$  in diagrams)
- $a_{e,z}$  distance between column face and slab edge parallel to z-axis (labelled  $a_z$  in diagrams)
- $g_a$  distance between column face and slab edge parallel to dimension a of column
- $g_b$  distance between column face and slab edge parallel to dimension b of column
- $g_y$  distance between column centre and slab edge parallel to y-axis
- $g_z$  distance between column centre and slab edge parallel to z-axis
- $g_L$  distance between slab edge and further radial centre of oval column parallel to dimension L
- $g_D$  distance between column centre and slab edge parallel to dimension D

### 6.2 Edge dimension limits

For re-entrant corners in the Shearfix software, the edge distances are limited. In the following sketches, the columns are drawn at the maximum permitted distance from the re-entrant corner.

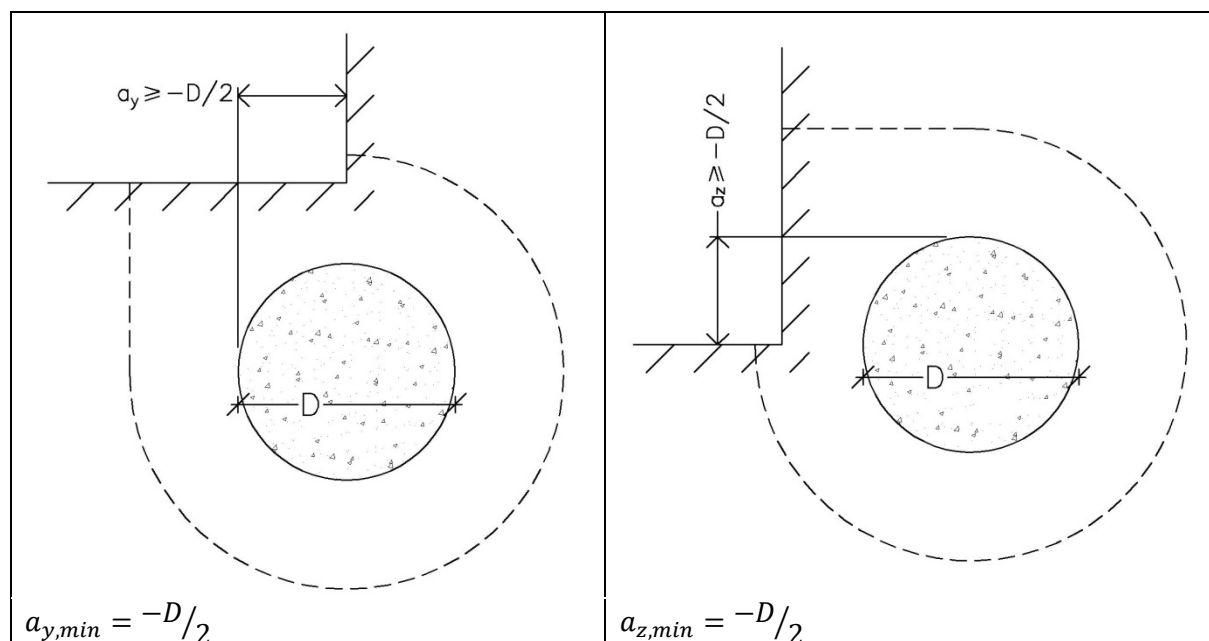

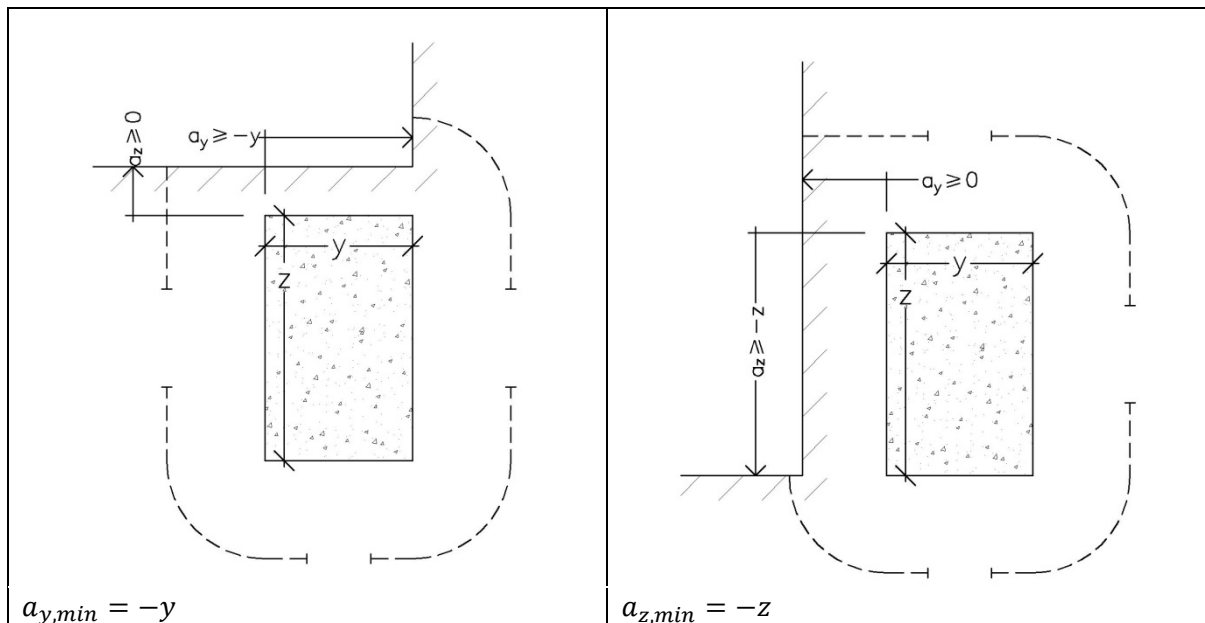

## 7 Column locations and virtual slab openings

The design approach allows for the user-defined column location to be automatically overridden if another location is more appropriate. The shortest possible basic control perimeter determines the column location.

This approach follows from BS EN 1992-1-1:2004 6.4.2 (4), “For a loaded area situated near an edge or a corner, the control perimeter should be taken as shown in [Figure 3 below], if this gives a perimeter (excluding the unsupported edges) smaller than that obtained from [Figure 4 below].”

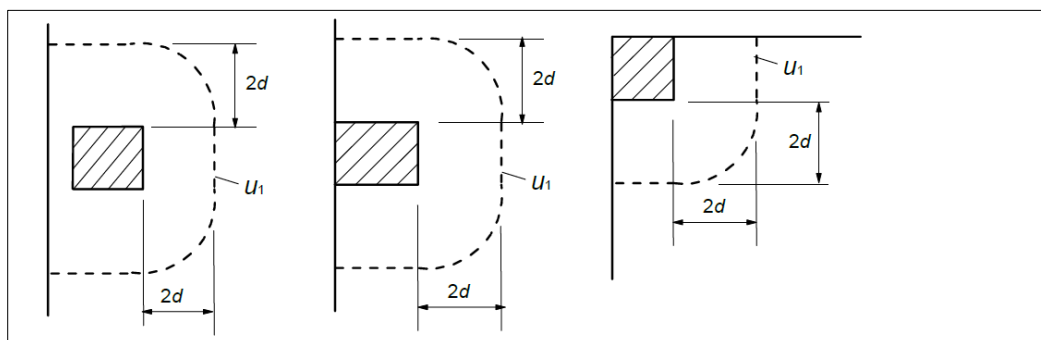


Figure 3 BS EN 1992-1-1:2004, Figure 6.15 Basic control perimeters for edge and corner columns

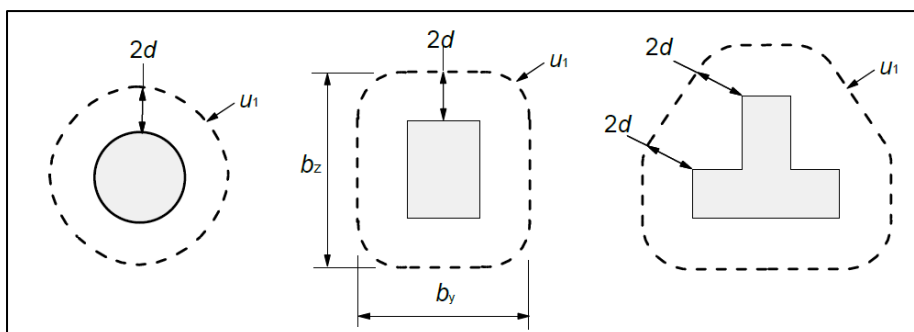


Figure 4 BS EN 1992-1-1:2004, Figure 6.13 Typical basic control perimeters around loaded areas



If a slab edge is located within a distance of  $6d$  from the column face and is not accounted for in the determined column location, then it is considered as a virtual opening in the slab. The size of a virtual opening is determined as shown in the following example.

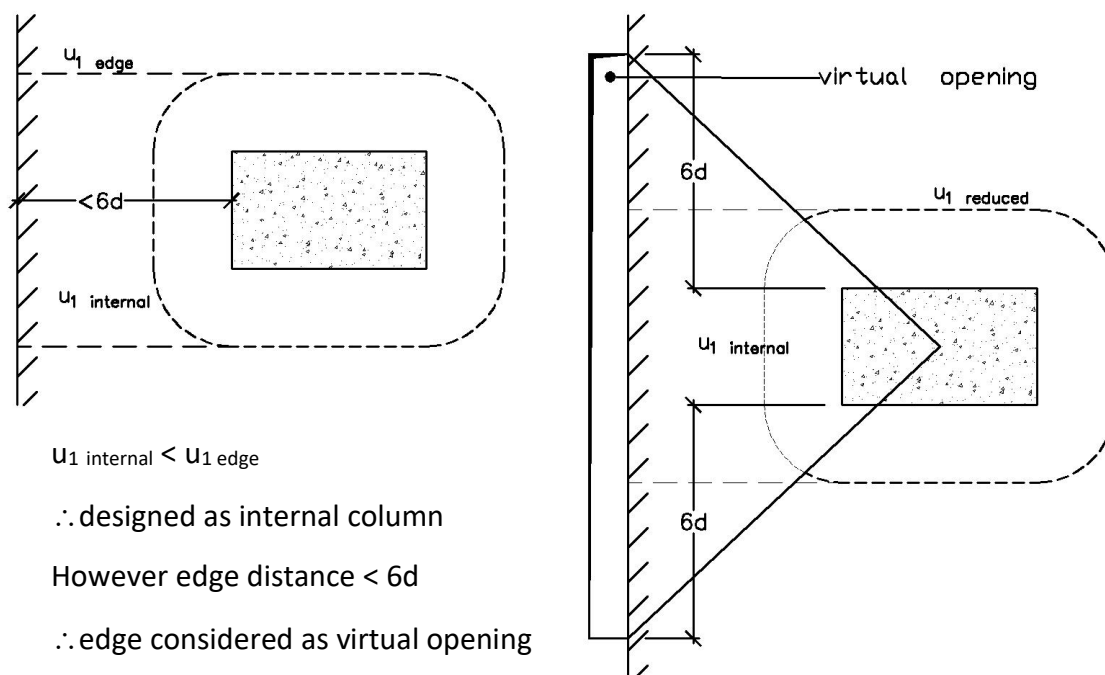


Figure 5 User-defined edge column designed as internal column with virtual opening at slab edge

## 8 Eccentricity factor $\beta$

The recommended approach for determining the eccentricity factor  $\beta$  is to use equations in section 6.4.3 parts (3)-(5) in EC2, based on the geometry and applied moments, referred to as “calculated” in the software.

The Eurocode presents one equation (6.39) which is applicable to all columns types. The Eurocode also presents a series of other equations each of which is applicable to a specific scenario. Our approach is to calculate the  $\beta$ -value according to the general formula (Equation 3) and according to a specific scenario formula where applicable. The greater of these two values is then adopted as the  $\beta$  value. A minimum value of  $\beta = 1.0$  is applied to all column shapes and locations.

In version 5.10 onwards, the software has been modified such that the  $u_1^*$  parameter accounts for reductions due to slab openings. Accordingly, in the  $\beta$  calculation, the  $u_1$  value also accounts for reductions due to slab openings where the  $u_1$  value relates to the  $u_1^*$  value; and, the  $u_1$  value does not account for reductions due to slab openings where the  $u_1$  value relates to the  $W_1$  factor.

Alternatively to the calculated approach, the user may input a  $\beta$  value they have calculated independently or a  $\beta$  value provided in Figure 6. The latter are referred to as “recommended” values in EC2 and as “default” values in the Shearfix program. The values in Figure 6 must only be used for structures where the adjacent slabs do not differ in length by more than 25% and where the lateral stability does not depend on frame action between the slabs and the columns. (Please note there is no recommended / default value for a re-entrant corner location.)

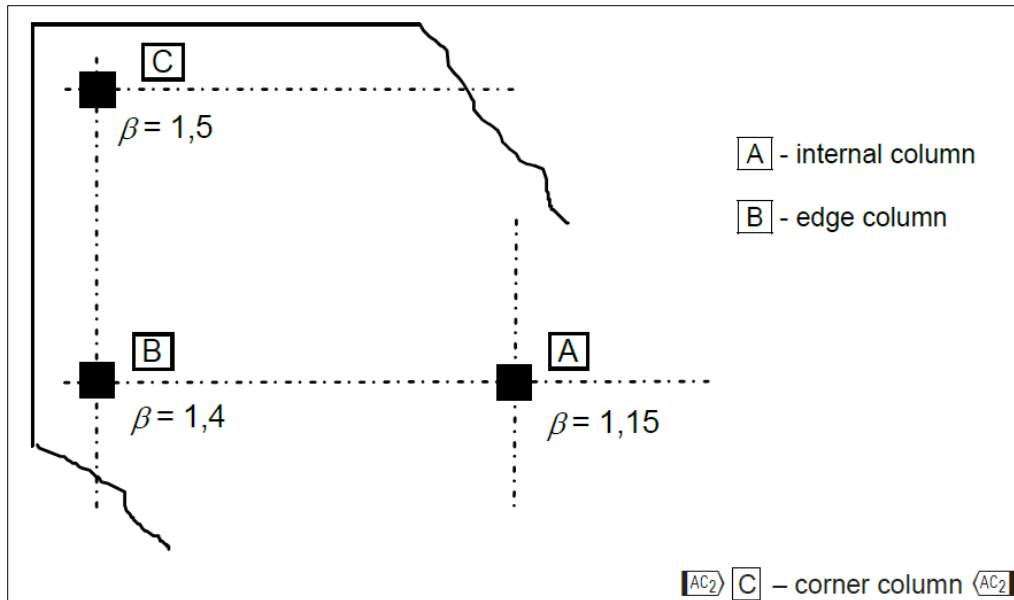


Figure 6 BS EN 1992-1-1:2004, Figure 6.21N Recommended values for  $\beta$

## 8.1 General formula for $\beta$ values

The general formula for calculating the  $\beta$ -value is a re-arranged version of equation (6.39) from BS EN 1992-1-1:2004.

$$\beta = 1 + k \frac{M'_{Ed} u_1}{V_{Ed} W_1}$$

Equation 3 General formula for beta-value adapted version of eq. (6.39)

Where,

- $k$  = coefficient relative to appropriate axes (See Table 1)
- $M'_{Ed}$  = design moment about centroid of basic control perimeter (See Section 9.1)
- $V_{Ed}$  = design shear force
- $u_1$  = basic control perimeter (See Table 3)
- $W_1$  = property of basic control perimeter relative to appropriate axes (See Section 9.3)

The  $k$  value is taken from the following table. Linear interpolation is assumed between stated values.

For circular columns,  $k = 0.6$

$c_1/c_2$	$\leq 0,5$	1,0	2,0	$\geq 3,0$
$k$	0,45	0,60	0,70	0,80

Table 1 BS EN 1992-1-1:2004, Table 6.1 Values of  $k$  for rectangular loaded areas

## 8.2 Internal column with biaxial moments

$$\beta = 1 + 1.8 \sqrt{\left(\frac{e_y}{b_z}\right)^2 + \left(\frac{e_z}{b_y}\right)^2}$$

Equation 4 BS EN 1992-1-1:2004 (6.43),  $\beta$  for internal rectangular column with biaxial moments

Where,

- $e_y$  and  $e_z$  = eccentricities along  $y$  and  $z$  axes respectively
- $b_y$  and  $b_z$  = dimensions of the control perimeter

Counter-intuitively,

$$e_y = \frac{M_{Ed,z}}{V_{Ed}} \quad \text{and} \quad e_z = \frac{M_{Ed,y}}{V_{Ed}}$$

Regardless of column size,  $b_y = y + 4d$  and  $b_z = z + 4d$

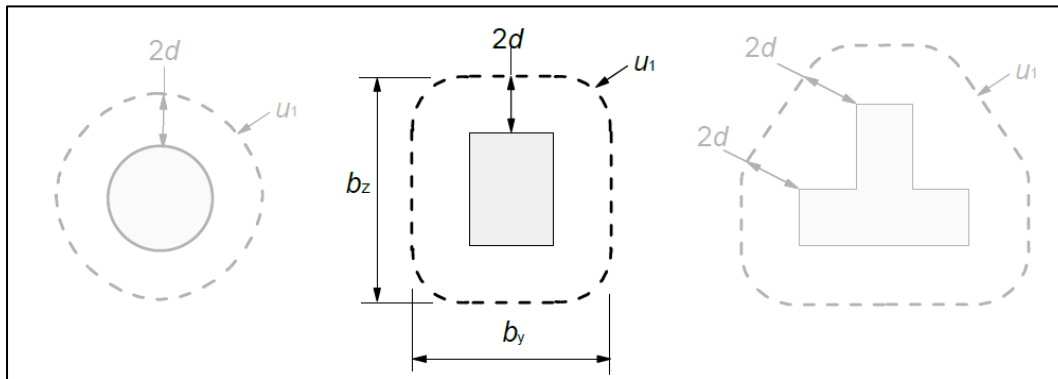


Figure 7 BS EN 1992-1-1:2004, Figure 6.13 Definition of  $b_y$  and  $b_z$  values

### 8.3 Edge column with moment towards interior of slab

This case applies to both edge columns and wall ends when the translated moment (acting about the centroid of the basic control perimeter) is towards the interior of the slab (see Section 9.1).

$$\beta = \frac{u_1}{u_1^*} + k \frac{u_1}{W_1} e_{par}$$

Equation 5 BS EN 1992-1-1:2004 eq. (6.44)  $\beta$ : edge column with loading towards interior of slab

Where,

- $u_1$  = basic control perimeter (Table 3)
- $u_1^*$  = reduced basic control perimeter (Table 3)
- $k$  = coefficient given in Table 1 with the ratio  $c_1/c_2$  replaced by  $c_1/2c_2$
- $W_1$  = property of basic control perimeter relative to axis perpendicular to slab edge (Section 9.3)
- $e_{par}$  = eccentricity parallel to slab edge resulting from a moment about an axis perpendicular to slab edge

### 8.4 Corner column with moment towards interior of slab

This case applies to both corner columns and wall corners when the translated moment (acting about the centroid of the basic control perimeter) is towards the interior of the slab (see Section 9.1).

$$\beta = \frac{u_1}{u_1^*}$$

Equation 6 BS EN 1992-1-1:2004 eq. (6.46)  $\beta$ : edge column where eccentricity is towards interior

Where,

- $u_1$  = basic control perimeter (Table 3)
- $u_1^*$  = reduced basic control perimeter (Table 3)

## 8.5 Default $\beta$ -value

Where  $\beta$  cannot be calculated using the above formulae, the following values can be used. These values can only be used if the lateral stability of the structure does not depend on frame action between the slabs and the columns and if adjacent spans do not differ in length by more than 25%.

Column location	Default $\beta$ -value, Figure (6.21N)
Internal	1.15
Edge or wall end	1.4
Corner or wall corner	1.5
Re-entrant corner	N/A

Table 2 BS EN 1992-1-1:2004 Figure 6.21N, Default ("Recommended") values for  $\beta$

## 9 Parameters for calculating $\beta$ -values

### 9.1 Translation of moments

In order to calculate the  $\beta$  value, the designer needs to provide the design moments applied to the column. These values are entered relative to the centre of the column, wall end or wall centre. (The "centre of a wall corner" is located at the centre of a square column of side dimension,  $l$ , where  $l$  is the effective length of the wall corner.) For the calculation of  $\beta$ , these are translated relative to the centroid of the basic control perimeter,  $u_1$ . The Shearfix program calculates this automatically.

The notation used is as follows:

$M_{Ed,y}$  Design moment about axis  $y$  through centroid of column

$M_{Ed,z}$  Design moment about axis  $z$  through centroid of column

$M'_{Ed,y}$  Design moment about axis  $y$  through centroid of basic control perimeter

$M'_{Ed,z}$  Design moment about axis  $z$  through centroid of basic control perimeter

The sign convention is determined by the right-hand rule: a positive bending moment follows the direction of curled fingers on the right hand when the thumb is pointed in the positive axis direction.

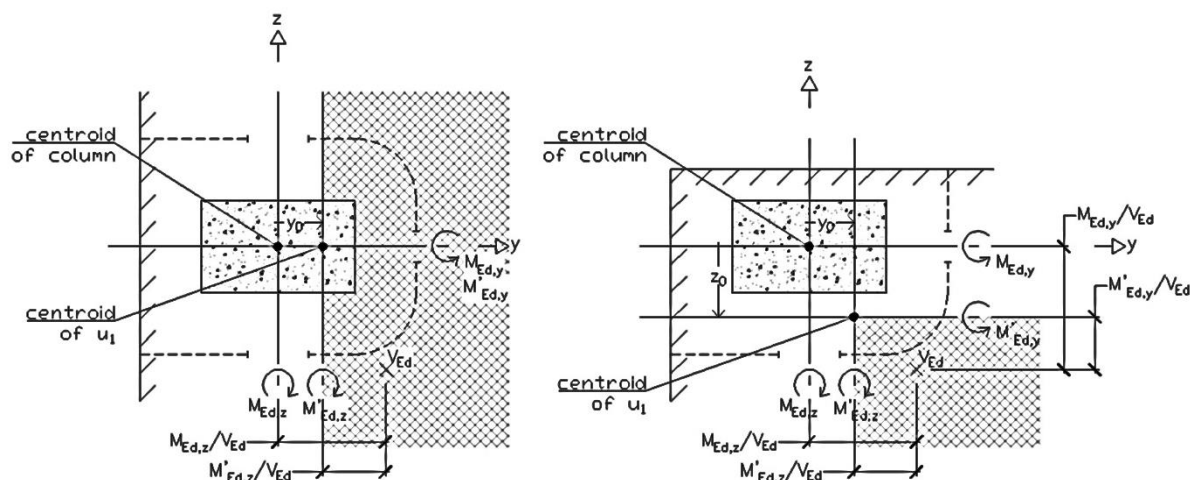


Figure 8 Translation of moment about column to moment about basic control perimeter

$$M'_{Ed,y} = M_{Ed,y} - z_0 V_{Ed} \quad \text{and} \quad M'_{Ed,z} = M_{Ed,z} - y_0 V_{Ed}$$

Equation 7 Translation of moment

where  $y_0$ ,  $z_0$ ,  $M_{Ed,y}$  and  $M_{Ed,z}$  are positive as illustrated in Figure 8.

## 9.2 Control perimeters

The column face control perimeters ( $u_0$ ) are presented in the Eurocode as follows:

$u_0$	for an interior column	$u_0 = \text{enclosing minimum periphery [mm]}$
	for an edge column	$u_0 = c_2 + 3d \leq c_2 + 2c_1$ [mm]
	for a corner column	$u_0 = 3d \leq c_1 + c_2$ [mm]

Figure 9 BS EN 1992-1-1:2004, 6.4.5(3) column face perimeters

The basic control perimeters ( $u_1$ ) for internal columns, and for edge and corner columns are presented in the Eurocode as follows:

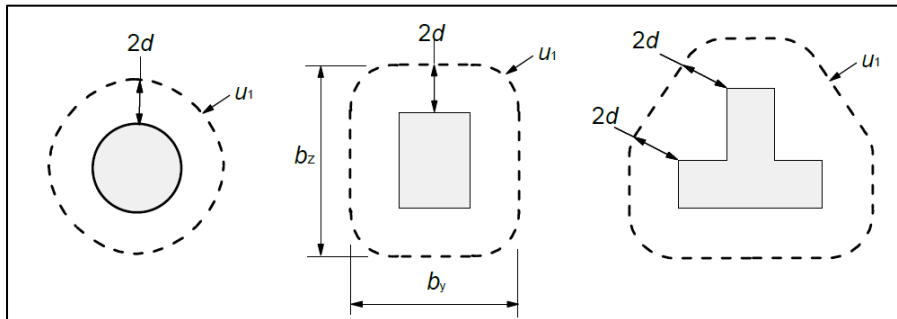


Figure 10 BS EN 1992-1-1:2004 Figure 6.13 Typical basic control perimeters around loaded areas

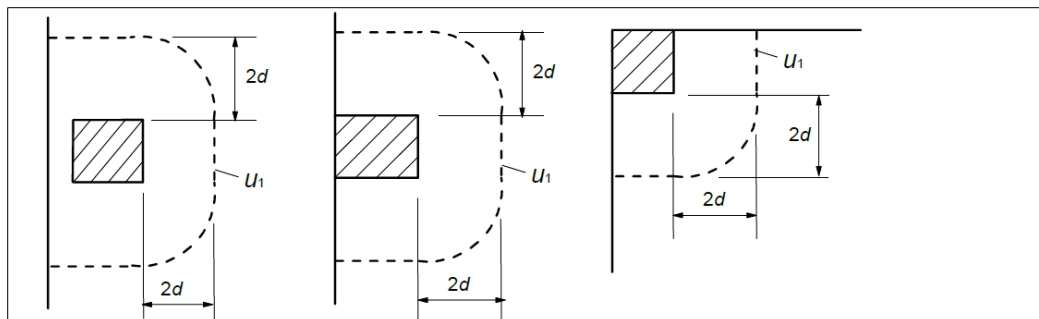


Figure 11 BS EN 1992-1-1:2004, Figure 6.15 Basic control perimeters for edge and corner columns

The reduced basic control perimeters ( $u_1^*$ ) for edge and corner columns are presented in the Eurocode as follows:

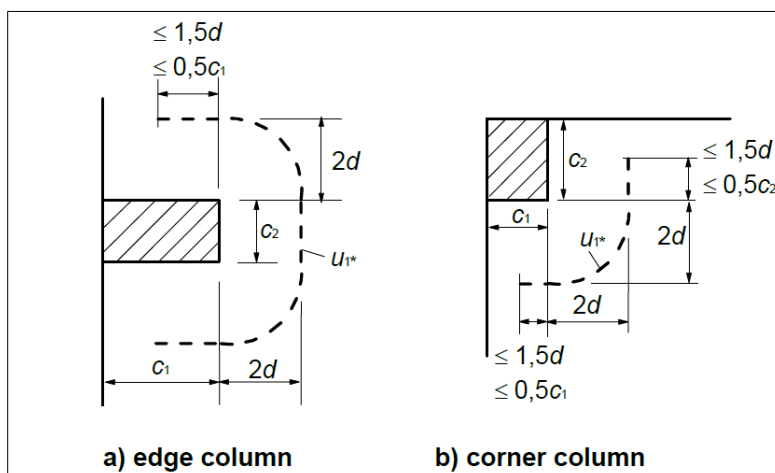


Figure 12 BS EN 1992-1-1:2004 Figure 6.20 Reduced basic control perimeter  $u_1^*$

The control perimeter definitions (Table 3) are based on these figures and the application of effective dimensions as described in section 8 above. These definitions have been revised for Shearfix 5.7 to incorporate the “1.5d” and “3d” limits to  $u_0$  and  $u_1^*$  values described above.

Column		Control perimeter		
Location	Shape	Column face, $u_0$	Basic, $u_1$	Reduced basic, $u_1^*$
Internal	Rectangular	$u_0 = 2a_1 + 2b_1$	$u_1 = 2a_1 + 2b_1 + 4\pi d$	N/A
	Circular	$u_0 = \pi D$	$u_1 = \pi(D + 4d)$	N/A
	Oval	$u_0 = 2L_1 + \pi D$	$u_1 = 2L_1 + \pi(D + 4d)$	N/A
Edge (equations depend on column orientation)	Rectangular	$u_0 = 2a_{1u0} + b_1$ $u_0 = a_1 + 2b_{1u0}$	$u_1 = 2a_1 + b_1 + 2g_a + 2\pi d$ $u_1 = a_1 + 2b_1 + 2g_b + 2\pi d$	$u_1^* = a_{1us} + b_1 + 2\pi d$ $u_1^* = a_1 + b_{1us} + 2\pi d$
	Wall end	$u_0 = 2l_{u0} + t$	$u_1 = 2l + t + 2\pi d$	$u_1^* = l_{us} + t + 2\pi d$
	Circular	$u_0 = 0.25\pi D + 2D_{u0}$	$u_1 = 0.5\pi(D + 4d) + 2g$	$u_1^* = 0.25\pi(D + 4d) + D_{us}$
	Oval	$u_0 = 2L_{1u0} + 0.5\pi D$ $u_0 = L_1 + 0.25\pi D + 2D_{u0}$	$u_1 = 2L_1 + 0.5\pi(D + 4d) + 2(g_L - L + D)$ $u_1 = L_1 + 0.5\pi(D + 4d) + 2g_D$	$u_1^* = 0.5\pi(D + 4d) + L_{1us}$ $u_1^* = 0.25\pi(D + 4d) + L_1 + D_{us}$
Corner	Rectangular	$u_0 = a_{1u0} + b_{1u0}$	$u_1 = a_1 + b_1 + g_a + g_b + \pi d$	$u_1^* = 0.5a_{1us} + 0.5b_{1us} + \pi d$
	Wall corner	$u_0 = 2l_{u0}$	$u_1 = 2l + \pi d$	$u_1^* = l_{us} + \pi d$
	Circular	$u_0 = 2D_{u0}$	$u_1 = 0.25\pi(D + 4d) + g_y + g_z$	$u_1^* = D_{us}$
	Oval	$u_0 = L_{1u0} + D_{u0} + 0.125\pi D$	$u_1 = L_1 + 0.25\pi(D + 4d) + g_L - L + D + g_D$	$u_1^* = 0.5L_{1us} + 0.5D_{us} + 0.125\pi(D + 4d)$
Re-entrant corner	Rectangular $g_a \geq 0, g_b \geq 0$	$u_0 = a_1 + b_1 + a_{1u0} + b_{1u0}$	$u_1 = 2a_1 + 2b_1 + g_a + g_b + 3\pi d$	N/A
	$g_a \geq 0, g_b < 0$	$u_0 = a_1 + b_1 + a_{1u0} + b_{2u0}$	$u_1 = 2a_1 + b_1 + b_2 + g_a + 3\pi d$	N/A
	$g_a < 0, g_b \geq 0$	$u_0 = a_1 + b_1 + a_{2u0} + b_{1u0}$	$u_1 = a_1 + 2b_1 + a_2 + g_b + 3\pi d$	N/A
	Circular	$u_0 = 0.5\pi D + 2D_{u0}$	$u_1 = 0.75\pi(D + 4d) + g_y + g_z$	N/A

Table 3 Control perimeters  $u_0$ ,  $u_1$  and  $u_1^*$  (see Table 4 & Table 5 below for parameter definitions)

Column shape	Parameter	Best Practice	EC2
rectangular	a	Max (y, z)	
	b	Min (y, z)	
	a <sub>1</sub>	Min (a, 4b, 3d)	Min (a, 4b)
	a <sub>1u0</sub>	Min (a, 4b, 1.5d)	
	a <sub>1us</sub>	Min (a, 4b, 3d)	
	b <sub>1</sub>	Min (b, 3d)	b
	b <sub>1u0</sub>	Min (b, 1.5d)	
	b <sub>1us</sub>	Min (b, 3d)	
	a <sub>2</sub>	Min (a+g <sub>a</sub> , 2b, 1.5d)	Min (a+g <sub>a</sub> , 2b)
	a <sub>2u0</sub>		Min (a+g <sub>a</sub> , 2b, 1.5d)
	b <sub>2</sub>	Min (b+g <sub>b</sub> , 1.5d)	b+g <sub>b</sub>
	b <sub>2u0</sub>		Min (b+g <sub>b</sub> , 1.5d)

Table 4 Control perimeter parameters

Column shape	Parameter	Best Practice	EC2
oval & circular	L	Max (y, z)	
	D	Min (y, z)	
	L <sub>1</sub>	Min (L-D, 3D, 3d)	Min (L-D, 3D)
	L <sub>1u0</sub>	Min (L-D, 3D, 1.5d)	
	L <sub>1us</sub>	Min (L-D, 3D, 3d)	
	D <sub>u0</sub>	Min (0.25πD, 1.5d)	
	D <sub>us</sub>	Min (0.25π(D+4d), 3d)	
walls	l	l <sub>auto</sub> or l <sub>user</sub> (whichever is selected)	
	l <sub>user</sub>	User input value	
	l <sub>auto</sub>	Min (2t, 1.5d)	2t
	l <sub>u0</sub>	Min (2t, 1.5d)	
	l <sub>us</sub>	Min (2t, 3d)	

	Distance parallel to...		Distance parallel to...
g <sub>a</sub>	dimension a from column face to slab edge	g <sub>b</sub>	dimension b from column face to slab edge
g <sub>D</sub>	dimension D from centre of column to slab edge	g <sub>L</sub>	dimension L from the further radial centre of column to slab edge
g <sub>y</sub>	y-axis from centre of column to slab edge	g <sub>z</sub>	z-axis from centre of column to slab edge
g = g <sub>y</sub> or g <sub>z</sub> , as appropriate			
For accompanying diagrams, see 8.1 Edge dimensions on page 6			

Table 5 Edge distance parameters

### 9.3 $W_1$ values

The  $W_1$  value is a shear distribution factor. It is a function of the basic control perimeter. It is the integral of the length of the basic control perimeter by its distance from the centroidal axis.

$$W_i = \int_0^{u_i} |e| dl$$

Equation 8 BS EN 1992-1-1:2004 eq. (6.40) Definition of  $W_1$  as a function of a control perimeter

Where,  $dl$  = length increment of the perimeter  
 $e$  = distance of  $dl$  from the axis about which the translated moment  $M'_{Ed}$  acts

This integral has been calculated for two column scenarios which are both presented in the Eurocode. The first scenario is a “small” rectangular internal column. “Small” means that the effective column dimensions are equal to the actual column dimensions, i.e.  $a_1 = a$  and  $b_1 = b$ .

$$W_1 = 0.5c_1^2 + c_1c_2 + 4c_2d + 16d^2 + 2\pi dc_1$$

Equation 9 BS EN 1992-1-1:2004 eq. (6.41),  $W_1$  formula for internal rectangular column

The second applies to a “small” rectangular column at a slab edge where the load eccentricity parallel to the slab edge is zero.

$$W_1 = 0.25c_2^2 + c_1c_2 + 4c_1d + 8d^2 + \pi dc_2$$

Equation 10 BS EN 1992-1-1:2004 eq. (6.45),  $W_1$  formula when  $a_1 = a$ ,  $b_1 = b$  and edge distance = 0

For all scenarios, the  $W_1$  value is automatically calculated by the Shearfix software.

## 10 Slab openings

For columns situated near openings, if the shortest distance from the column face to the edge of the opening does not exceed  $6d$ , that part of the control perimeter contained between two tangents drawn to the outline of the opening from the column centre is considered ineffective. (BS EN 1992-1-1:2004 6.4.2 (3)). This leads to reduced effective control perimeters ( $u_0$ ,  $u_1$ ,  $u_1^*$  and  $u_{out}$ ) which are applied to the  $\beta$  calculations, shear stress calculations and the layout of punching shear reinforcement.

For rectangular openings, the two tangential lines must be a minimum distance apart. This minimum distance is measured at the corner of the opening which sets out the position of a tangential line and is closest to the column. This minimum distance is:  $l_3 \geq \sqrt{l_1 \times l_2}$  where  $l_1$  is the larger slab opening dimension and  $l_2$  is the lesser slab opening dimension. (See Figure 13.) There is no equivalent minimum distance for circular openings.




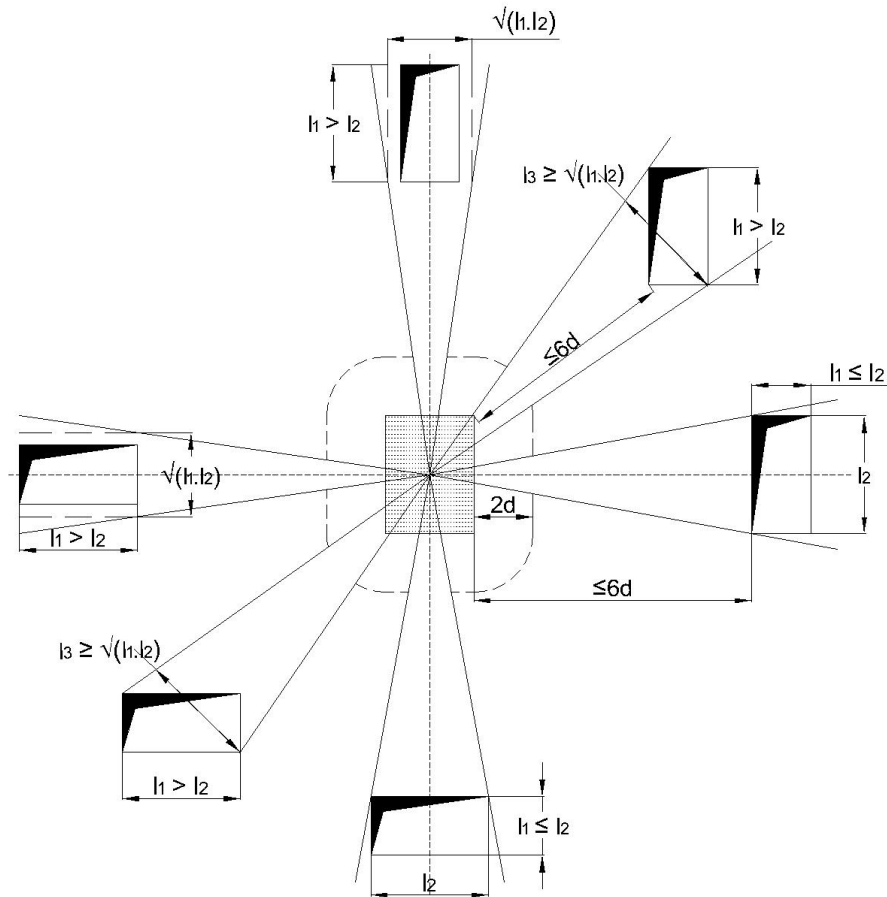


Figure 13 Control perimeter near openings, developed from BS EN 1992-1-1:2004 Figure 6.14

### 11 Shear stress calculations

The design procedure is described in the following flowchart:

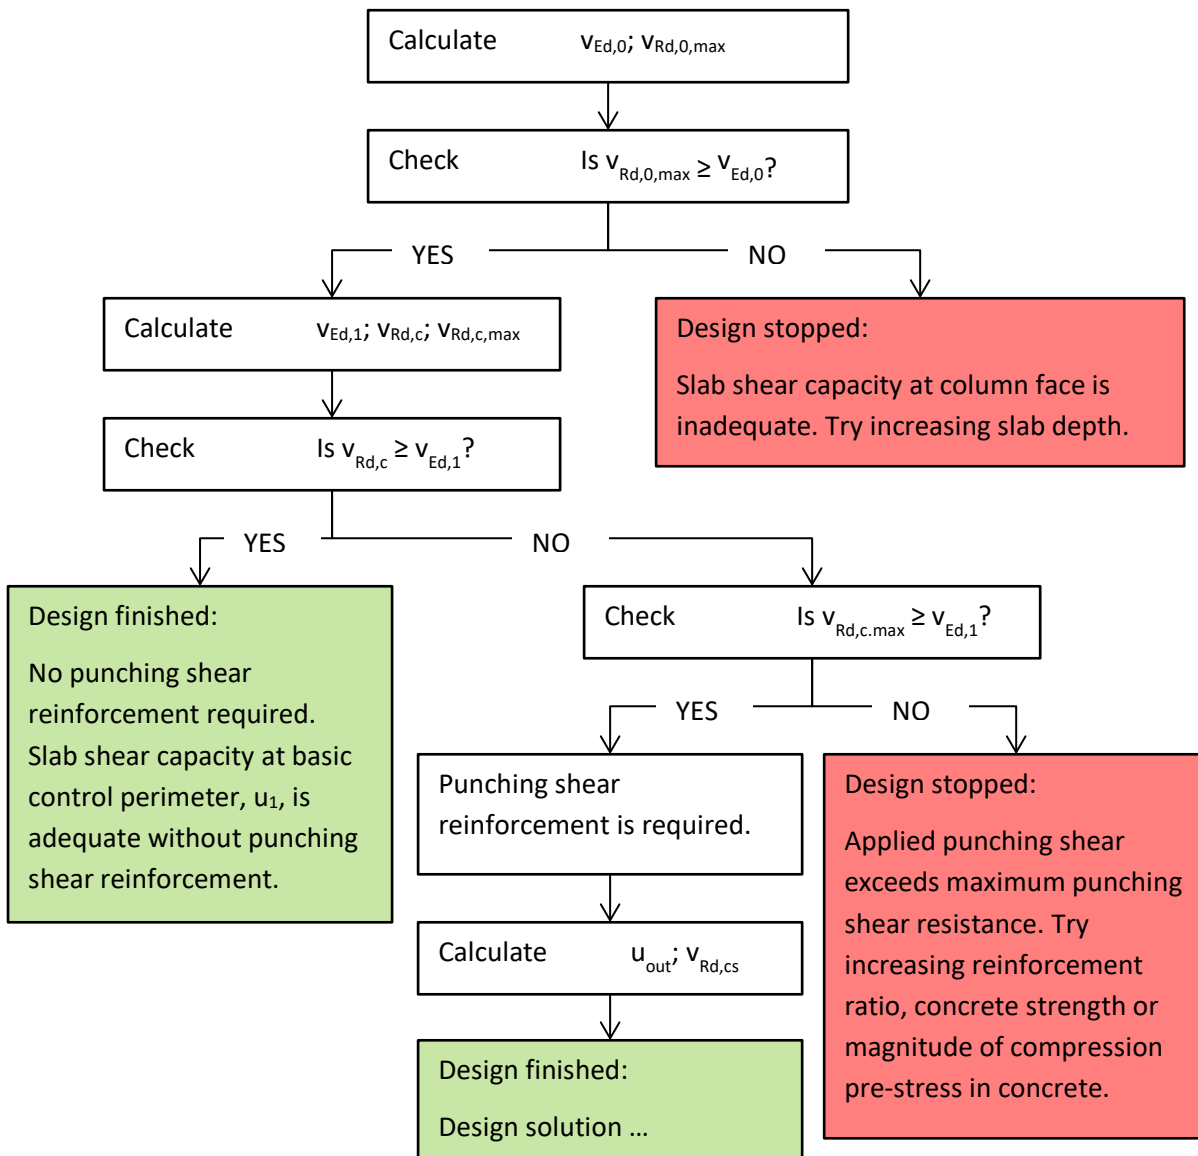

For the purpose of these calculations,

$u_0$  [mm] the column face control perimeter accounting for reductions due to slab openings

$u_1$  [mm] the basic control perimeter accounting for reductions due to slab openings

The shear stresses are calculated as follows. (All references relate to BS EN 1992-1-1 or its national annex.)

The applied design shear stress at the column face,  $v_{Ed,0} = \frac{\beta V_{Ed}}{u_0 \times d} \leq v_{Rd,max}$  [MPa] eq. (6.53)

where  $\beta$  = the eccentricity factor (Section 10)

$V_{Ed}$  = the applied design shear force [N]

$u_0$  = the column face control perimeter accounting for reductions due to slab openings (Table 3 and Section 12) [mm]

$d$  = slab effective depth (Section 5) [mm]

The maximum shear capacity at the column face,  $v_{Rd,max} = 0.5vf_{cd}$  [MPa] (NA 6.4.5 (3))

where strength reduction factor,  $v = 0.6 \left(1 - \frac{f_{ck}}{250}\right)$  NA 6.2.2 (6)

$f_{ck}$  = cylinder strength of concrete (MPa)

design compressive strength,  $f_{cd} = \alpha_{cc}f_{ck}/\gamma_c$  [MPa] eq. (3.15)

coefficient taking account of long term effects,  $\alpha_{cc} = 1$  NA 3.1.6 (1)

partial safety factor for concrete,  $\gamma_c = 1.5$  Table 2.1N (NA 2.4.2.4(1))

The applied design shear stress at the basic control perimeter,  $v_{Ed,1} = \frac{\beta V_{Ed}}{u_1 \times d}$  (MPa) eq. (6.38)

where  $u_1$  = the basic control perimeter accounting for reductions due to slab openings (determined using Table 3 and section 12) [mm]

The shear capacity without punching shear reinforcement,

$$v_{Rd,c} = C_{Rd,c}k(100\rho_l f_{ck})^{1/3} + k_1\sigma_{cp} \geq (v_{min} + k_1\sigma_{cp}) \quad \text{eq. (6.47)}$$

where  $C_{Rd,c} = 0.18/\gamma_c$  NA 6.4.4 (1)

partial safety factor for concrete,  $\gamma_c = 1.5$  Table 2.1N (NA 2.4.2.4(1))

$$k = 1 + \sqrt{\frac{200}{d}} \leq 2.0 \quad 6.4.4 (1)$$

$\rho_l$  = reinforcement ratio (Section 7)

$k_1 = 0.1$  NA 6.4.4 (1)

$$\sigma_{cp} = (\sigma_{cy} + \sigma_{cz})/2 \quad 6.4.4 (1)$$

normal concrete stresses in the critical section in y- and z-directions (MPa, positive in

compression),  $\sigma_{cy} = \frac{N_{Ed,y}}{A_{cy}}$  and  $\sigma_{cz} = \frac{N_{Ed,z}}{A_{cz}}$  6.4.4 (1)

$N_{Ed,y}$ ,  $N_{Ed,z}$  = longitudinal forces across the critical section from a load or prestressing action.

[N] 6.4.4 (1)

$A_c$  = area of concrete according to the definition of  $N_{Ed}$  [mm<sup>2</sup>] 6.4.4 (1)

$$v_{min} = 0.035k^{3/2}f_{ck}^{1/2} \quad \text{NA 6.4.4 (1)}$$

The maximum limiting value of punching shear capacity,  $v_{Rd,c,max} = 2 \times v_{Rd,c}$  NA 6.4.5(1)

If it is determined that punching shear reinforcement is required. The layout of that reinforcement is determined using Section 15.

The extent of that reinforcement is determined by calculating the length of the control perimeter at which punching shear reinforcement is no longer required:

$$u_{out} = \frac{\beta V_{Ed}}{v_{Rd,c} \times d} \quad \text{eq. (6.54)}$$

The outer perimeter of shear studs must be within a distance of 1.5d from that perimeter. The shape of the outer control perimeter  $u_{out}$  is dependent on the arrangement of shear reinforcement, effective column dimensions and ineffective regions due to slab openings.

The shear capacity with punching shear reinforcement,  $v_{Rd,cs} = 0.75v_{Rd,c} + 1.5\left(\frac{d}{s_r}\right)A_{sw}f_{ywd,ef}\left(\frac{1}{u_1d}\right)\sin\alpha$  eq. (6.52)

This equation is rearranged to determine the area of punching shear reinforcement required per perimeter around the column,

$$A_{sw} = \frac{(v_{Ed,1} - 0.75v_{Rd,c})s_r u_1}{1.5f_{ywd,ef}}$$

where  $s_r$  = radial spacing of perimeters of shear reinforcement [mm]  
 effective design strength of punching shear reinforcement,

$$f_{ywd,ef} = 250 + 0.25d \leq f_{ywd} \text{ [MPa] } 6.4.5(1)$$

design yield strength of punching shear reinforcement,  $f_{ywd} = f_{yk}/\gamma_s$  [MPa] 3.2.7(2)

characteristic yield strength of punching shear reinforcement,  $f_{yk} = 500$  MPa

partial safety factor for reinforcing steel,  $\gamma_s = 1.15$  Table 2.1N (NA 2.4.2.4(1))

Also, the minimum area of a single shear stud can be determined from:

$$A_{sw,min}(1.5\sin\alpha + \cos\alpha)/s_r s_t \geq 0.08\sqrt{f_{ck}}/f_{yk} \quad \text{eq. (9.11)}$$

where  $\alpha$  = the angle between the shear reinforcement and the main steel.

For Shearfix,  $\alpha = 90^\circ$  therefore  $\sin\alpha = 1$ ,  $\cos\alpha = 0$ .

Therefore equation (9.11) can be rearranged and simplified:

$$A_{sw,min} \geq \frac{0.08s_r s_t \sqrt{f_{ck}}}{1.5f_{yk}}$$

where  $s_t$  = maximum tangential spacing of outermost studs [mm]

Typically, the number of shear studs per perimeter, or number of shear rails installed, is driven by the minimum spacing rules as described in Section 3. The area of punching shear reinforcement required per perimeter then dictates the size of each shear stud.

## 12 National Annex parameter values

The primary focus of our design approach is the Eurocode and its UK National Annex. However, to accommodate designs to other European National Annexes, the software allows the user to manually alter parameter values which are specified in the UK National Annex.

The values in grey font below can be altered. The value stated is the value in the UK National Annex and is set as default in the software.

National Annex parameters	Clauses	Purpose of parameter
$C_{Rd,c} = 0.18/\gamma_c$	6.4.4(1)	To calculate the design punching shear resistance of slabs without shear reinforcement, $V_{Rd,c}$
$v_{min} = 0.035k^{3/2}f_{ck}^{1/2}$		
$k_1 = 0.1$		
$v_{Rd,max} = 0.5v_{fcd}$	6.4.5(3)	The maximum limiting punching shear resistance at the column face
$k_{max}v_{Rd,c} = 2v_{Rd,c}$	6.4.5(1)	The maximum limiting punching shear resistance of the slab with shear reinforcement
Factor of distance, $k = 1.5$	6.4.5(4)	The outermost perimeter of shear reinforcement should be placed at a distance not greater than $kd$ within $u_{out}$ or $u_{out,ef}$ .
<input checked="" type="checkbox"/> shear rail min'm length to $1.5d$ from column face		This clause sits in the UK National Annex and effectively prescribes a minimum of 3 studs per rail.

## 13 Layout of punching shear reinforcement

We have developed a procedure to determine the layout of Shearfix. This procedure is designed to accommodate the following detailing rules:

- Punching shear reinforcement should be detailed in accordance with BS EN 1992-1-1:2004 and its associated National Annex.
- The first stud is to be placed between  $0.3d$  and  $0.5d$  from the column face. (BS EN 1992-1-1:2004, Figure 9.10 a) and 9.4.3 (4).) (The default value is  $0.5d$ .)
- Radial spacing of studs should not exceed  $0.75d$ . (BS EN 1992-1-1:2004, 9.4.3 (1).)
- The maximum tangential spacing of studs inside the basic control perimeter is  $1.5d$ . (BS EN 1992-1-1:2004, 9.4.3 (1).)
- The maximum tangential spacing of studs outside the basic control perimeter is  $2d$ . (BS EN 1992-1-1:2004, 9.4.3 (1).)
- The minimum distance between a stud and a slab edge is  $0.75d$ .
- The minimum tangential spacing between shear studs is  $0.75d$ .
- The outermost perimeter of studs should be at a distance no greater than  $1.5d$  within  $u_{out}$ . (NA to BS EN 1992-1-1:2004, 6.4.5 (4).)
- The shape of the outer control perimeter  $u_{out}$  is dependent on the arrangement of shear reinforcement, the effective column dimensions and the ineffective regions due to slab openings. (See later in this section for more details.)
- There must be a minimum of two perimeters of punching shear reinforcement (according to the Eurocode). (BS EN 1992-1-1:2004, 9.4.3 (1).) See the next point.

- If the outer control perimeter  $u_{out}$  is situated within a distance of  $3d$  from the column face, the shear studs should be placed between  $0.3d$  and  $1.5d$  from the column face. (NA to BS EN 1992-1-1:2004, 6.4.5 (4).) This is a UK National Annex criterion which effectively sets a minimum of three perimeters of punching shear reinforcement, overriding the Eurocode minimum of two perimeters.
- Two radial layouts and a cruciform layout are available.
- Radial layouts are permitted with any column shape. Cruciform layouts are only permitted with rectangular columns.
- With both radial layouts additional secondary reinforcement may be required to achieve the minimum tangential spacing between studs.
- With cruciform layouts secondary reinforcement is required at column corners.
- With cruciform layouts, increasing the number of studs per rail to more than three does not increase the length of the outer control perimeter,  $u_{out}$ . Therefore, three studs per rail is treated as both the minimum and the maximum number of shear studs per rail for a cruciform layout (when designing to suit the UK National Annex.)

The general procedures for radial and cruciform layouts are presented below.

### 13.1 Radial layout general procedure

Figure 14 illustrates the setting out points for radial layouts. For rectangular columns, the four setting out points are a distance  $c_3$  and  $c_4$  from each corner. For circular columns, the setting out point is at the column centre. For oval columns, the two setting out points are at the radial centres of the circular column ends.

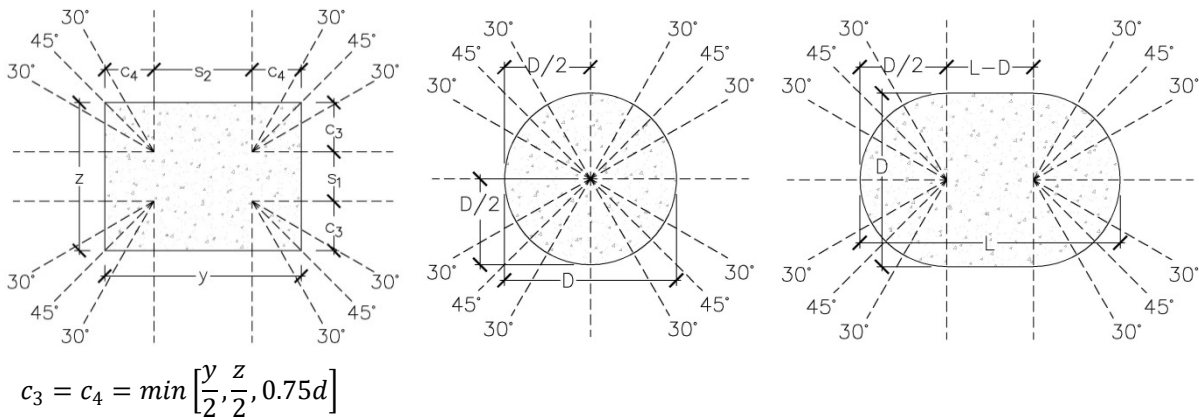


Figure 14 Radial layout setting out points

Secondary rails are placed between radial main rails where the tangential distance between studs exceeds the maximum limit. Inside the basic control perimeter, this limit is  $1.5d$ . Outside the basic control perimeter, this limit is  $2d$ .

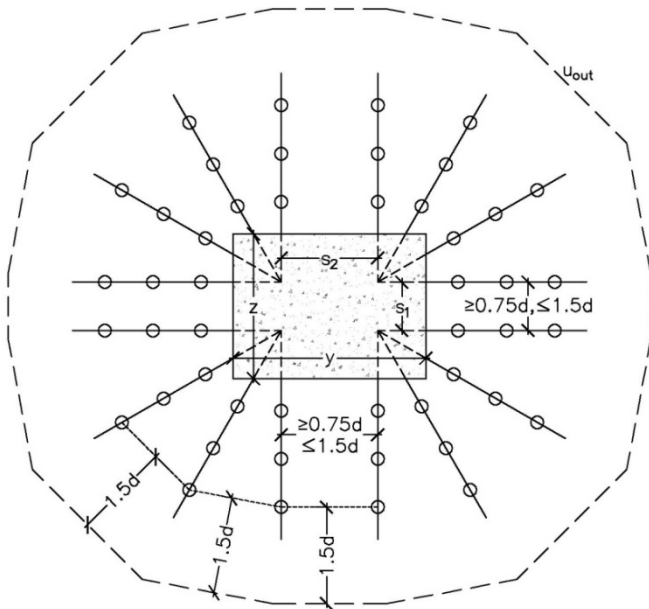


Figure 15 Radial layout of rails for internal rectangular column with associated outer control perimeter

### 13.2 Cruciform layout general procedure

Cruciform layouts are only permitted for rectangular columns. Figure 16 illustrates the setting out points for cruciform layouts which are at a distance of  $s_{r0}$  from each column corner. On two faces these columns are full length main rails; on the other two faces these are secondary rails (shorter by one stud).

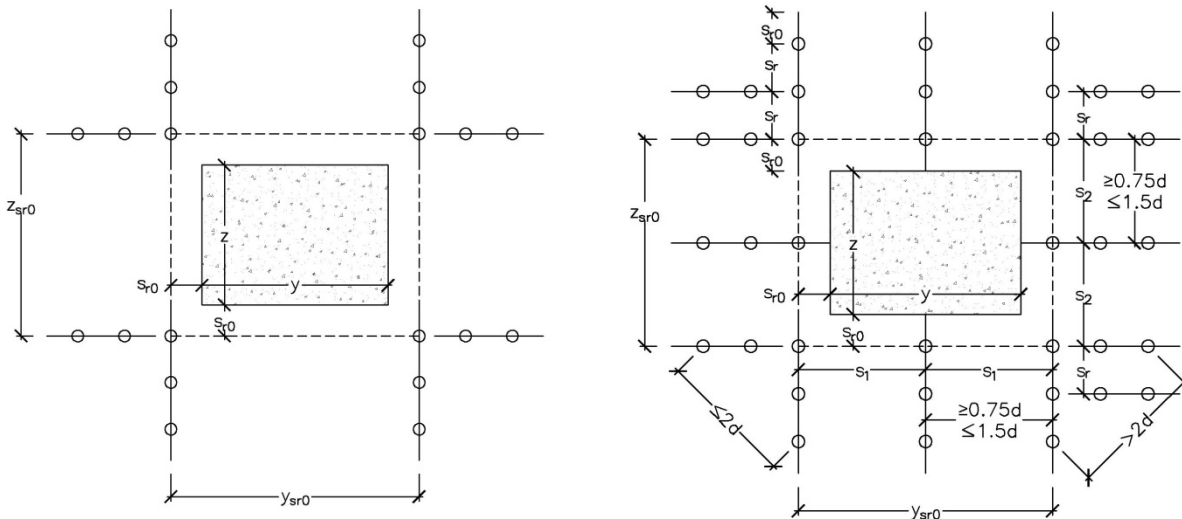


Figure 16 (i) and (ii) Cruciform layout procedure

Further main rails are placed along the column faces as necessary to suit a maximum spacing of  $1.5d$ . If the minimum distance between the outermost studs at each corner is greater than  $2d$ , a further secondary rail is placed parallel to, and a distance of  $0.75d$  from, the first secondary rail.

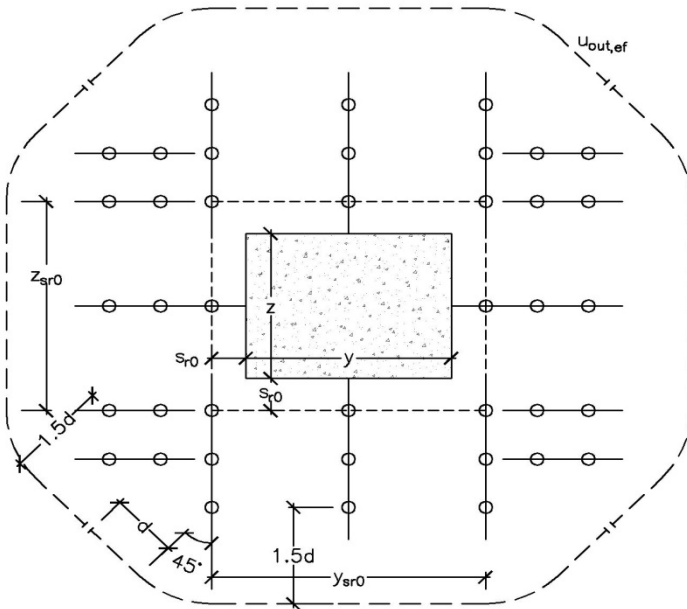


Figure 17 Cruciform rail layout and associated effective outer perimeter

### 13.3 Rails near slab openings and distribution rails

Any rails which pass through an opening in the slab are deleted. Any rail with at least one shear stud in an ineffective area becomes a distribution rail. An area of slab becomes ineffective due to: (a) an opening; or, (b) its distance from the corner of a large or elongated column (according to the design approach selected: Best Practice or EC2). Any rails which have all studs in an ineffective opening zone are deleted.

An example rail layout is illustrated in Figure 18. All rails illustrated are main rails unless indicated otherwise. In this example, there are fifteen main rails, six distribution rails and no secondary rails. This is an example of a “large” column adhering to the “Best Practice” design approach. It also illustrates a reduction in the basic and outer control perimeters due to the slab opening.

If the designer selects the Best Practice approach, they can choose to include or exclude distribution rails. If distribution rails are excluded, it is recommended that the designer independently checks the shear capacity in the ineffective zone and designs shear reinforcement accordingly. Also, the designer may deduct the beam shear (one-way shear) resisted by the ineffective zones from the design punching shear resisted by the effective zones. (ie. The design shear load entered in the software may be reduced.)



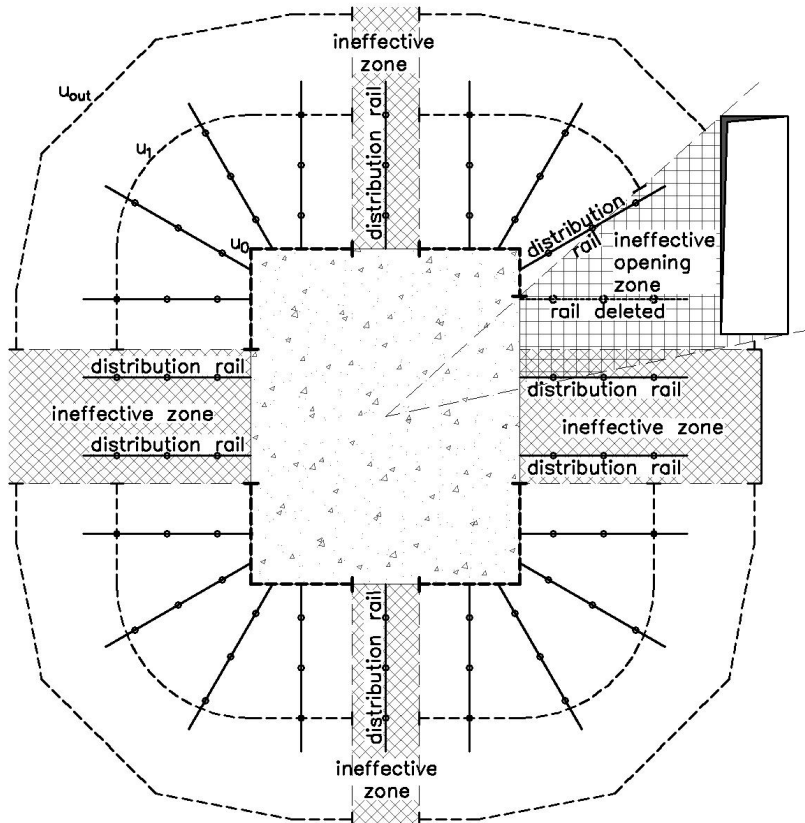


Figure 18 Example rail layout with deleted rails and ineffective main rails

## 14 References

BS EN 1992-1-1:2004+A1:2014, Eurocode 2: Design of concrete structures – Part 1-1: General rules and rules for buildings

NA+A2:2014 to BS EN 1992-1-1:2004+A1:2014, UK National Annex to Eurocode 2: Design of concrete structures – Part 1-1: General rules and rules for buildings