

# INSTALLATION GUIDE

## MM 63 REMEDIAL WALL TIE

Drill a hole through the outer leaf and into the inner to a minimum depth of 55mm using a 10.5mm drill bit. Remove dust and debris.

Screw the male threaded portion of the tie into the female threaded part of the setting tool. Note a gap of at least 1mm must be maintained between the nut and the end of the setting tool.

Insert the wall tie into the predrilled hole and turn in a clockwise direction whilst gently pushing into the back of the hole. Continue turning until hand tight.

To remove the fixing tool, hold the single handle whilst turning the T handle anti-clockwise. Unscrew fixing tool from wall tie. Close together the setting tool prior to setting additional ties.


Carry out pull test to tie on inner leaf if required.

To fix the outer leaf insert the hexagonal setting tool over the small nut on the tie and turn clockwise until hand tight. Remove setting tool.

Make good to the outer brick using colour matched mortar or mastic.



**INNER SETTING TOOL**

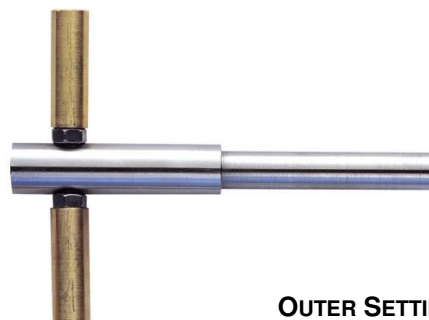

**OUTER SETTING TOOL**

© Ancon Building Products, 2000

The Construction applications and details provided in this guide are indicative only.

In every case installation should be entrusted to appropriately qualified and experienced persons.

Normal handling precautions should be taken to avoid physical injury. Ancon Building Products cannot be held responsible for any injury as a result of using our products, unless such injury arises as a result of our negligence.