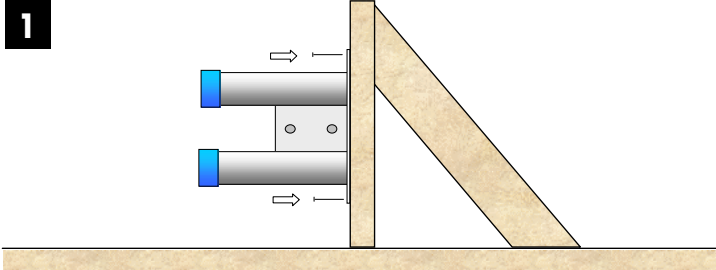
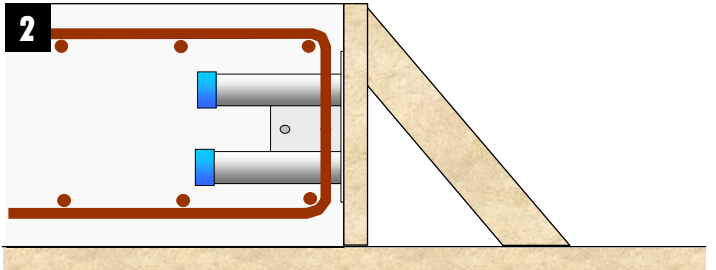
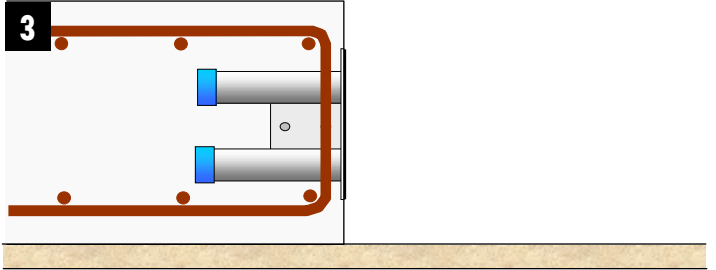



DSD/DSDQ/ESD/ESDQ


Installation


- 

1 Nail sleeve to formwork. Do not remove sticky label, this prevents ingress of concrete into the sleeve
- 

2 Fix the local reinforcement around the sleeve and pour the concrete
- 

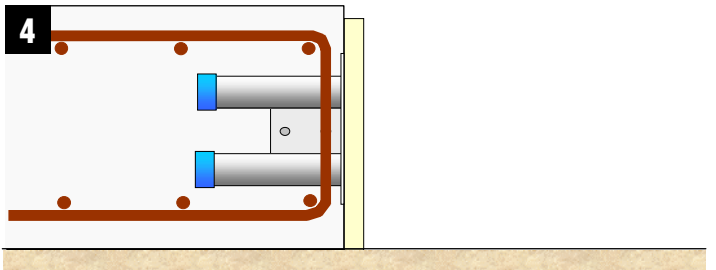3 When the concrete has achieved sufficient strength, strike shuttering and peel off or puncture the label
- 

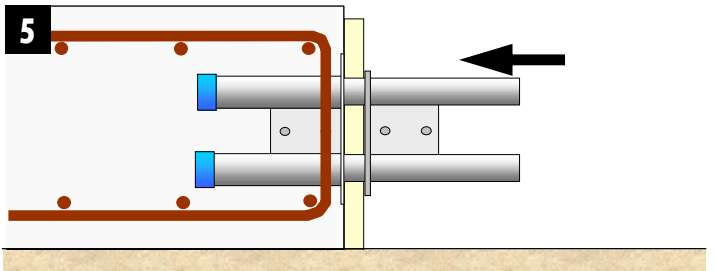4 Position compressible joint filler
- 

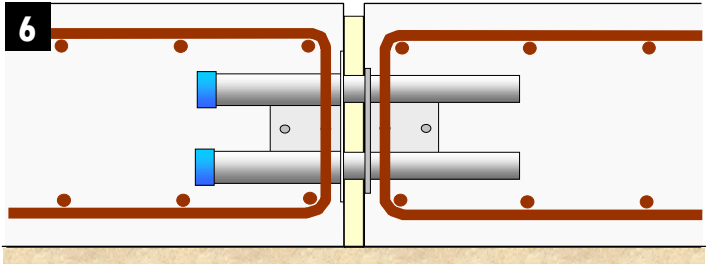5 Push the dowel component through the filler until it is fully located in the sleeve
- 

6 Fix the local reinforcement around the sleeve and pour the concrete